

Safety instructions

Non-observance of these safety instructions and precautions can lead to serious injury. Therefore please read the following instructions before using your barbecue.

- This barbecue may only be used outdoors, never indoors.
- Before using the barbecue, position it out of the wind as much as possible.
- Only use commercial barbecue firelighters and follow the instructions on its packaging.
- When using barbecue lighter fluid distribute the fluid evenly over the charcoal briquettes, let it soak into the charcoal briquettes for a few minutes, then carefully light the charcoal briquettes. Take special care that it does not accumulate in the bottom of the bowl. If so use a lit match to ignite the fluid in order to burn it off before starting to cook.
- Do not use fluids such as petrol or similar highly flammable spirits to light or re-light the barbecue!
- Do not add lighter fluids or charcoal briquettes, impregnated with barbecue lighter fluid to hot or warm charcoal briquettes.
- Keep a secure distance of 1.5 meters from combustible materials.
- Always keep children and pets away from the barbecue.
- Do not move the barbecue when in use.
- Do not remove ashes until all charcoal briquettes are completely burned out and fully extinguished.
- Always wear heat resistant oven mitts when grilling or adjusting the vent holes.
- Do not wear clothing with loose flowing sleeves while lighting or using the barbecue.